


1. Your phone

This chapter introduces you to the keys and display indicators of the phone. More details are given throughout this user's guide.


■ Using the keys

Power key



Pressing and holding the  key switches the phone on or off.

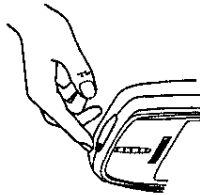

In standby mode, pressing this key briefly shows the list of profiles which allow you to set the phone tones for different environments.

In a menu function, pressing this key briefly turns on the lights for 15 seconds.



Number keys

 to  allow you to key in numbers and letters.


 and  are used for various purposes in different functions.

Navi key

The use of the phone is largely based on the Nokia Navi™ key (⏏) below the display (2).

The function of this key varies according to the guiding text (1) shown above it.

In this user's guide, the ⏏ symbol is followed by the related guiding text, e.g. ⏏ (Menu) or ⏏ (Select).

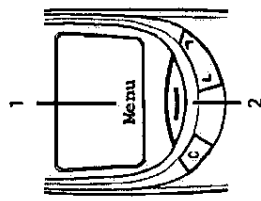

Scroll keys

In standby mode: ⏏ shows the names and phone numbers stored in the Phone book. ⏏ shows the list of last dialled numbers.

In the menu: These keys browse through menus and settings.

When keying in a name or number or writing a text message:

⏏ moves the cursor to the left and ⏏ to the right.

During a call: These keys adjust the earpiece volume.

 


C key

When keying in a name or number: This key deletes the character to the left. When pressed and held, it deletes all characters from the display.

In a menu function: This key returns to the previous menu level. Press and hold this key to exit the menu.

When you receive a call: Pressing this key rejects the call.




■ Display indicators

Display indicators inform you of the current operation of the phone.

Standby mode

The indicators described below are shown when the phone is ready for use, with no characters keyed in by the user. When this screen is shown, the phone is in 'standby mode'.

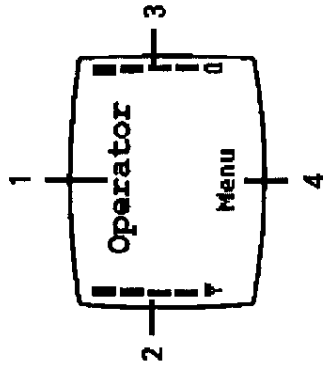


1. Indicates in which cellular network the phone is currently used.
2. Shows the signal strength of the cellular network at your current location. The higher the bar, the stronger the signal.
3. Shows the battery charge level. The higher the bar, the more power left in the battery.
4. Shows the current function of the Nokia Navi™ key (☹).

Essential indicators related to menu functions

One or more of the following indicators may be shown when the phone is in standby mode:


1. Remove the back cover:

Press the locking catch (1), slide the cover (2), and lift the cover (3).

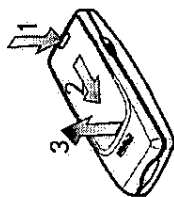

2. Remove the battery:


Push the two release catches in the opposite directions (4) and remove the battery (5).

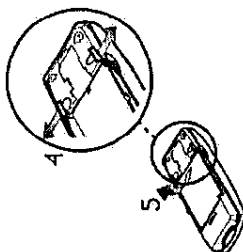

3. Insert the SIM card:


Slide the SIM card carefully into the SIM card slot (6).

Make sure that the golden connectors on the card are facing downwards and that the bevelled corner is on the left.

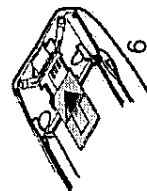


4. Install the battery:

Align the golden connectors on the battery with the corresponding connectors on the phone and push the opposite end of the battery until it snaps into place (7).

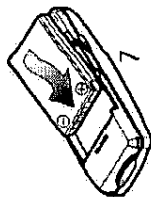


5. Replace the back cover:

Insert the two catches of the back cover in the corresponding slots in the phone (8) and slide the cover towards the bottom of the phone until it locks into place (9).

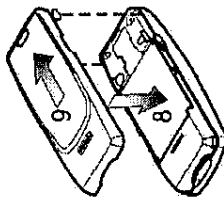

■ Charging the battery


- Do not charge the battery when either of the phone covers is removed. See also Battery information on page 109.

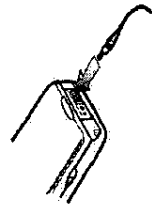


1. Connect the lead from the charger to the base of the phone.
2. Connect the charger to an AC wall outlet. The battery indicator bar starts scrolling.
 - The phone can be used while charging if it is switched on.
 - If the battery is totally run down, it may take up to a few minutes before the charging indicator is shown.
 - The charging time depends on the charger and battery used and on how much power there is left in the battery. For example, charging the battery supplied with the phone may take up to six hours when using the ACP-7 charger.
 - If *Not charging* is displayed, charging is suspended. Wait for a while, disconnect the charger, plug it in again and retry. If charging still fails, contact your dealer.
3. When the battery is fully charged, the bar stops scrolling. Disconnect the charger from the AC outlet and the phone.

■ Switching the phone on or off

 
Switching on

Press and hold the  key for a second.

If the phone requests a PIN code or security code:

Key in the code and press  (OK).

See also PIN code request on page 84, Phone security on page 86, and Access codes on page 107.

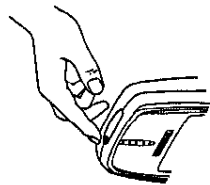


Warning! Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



Note:

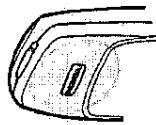


- Always store and use the phone with the covers attached.
- **TIPS ON EFFICIENT OPERATION:** Your phone has a built-in antenna (blue area in picture). As with any other radio-transmitting device, do not touch the antenna unnecessarily when the phone is switched on. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed. Not touching the antenna area during a phone call optimises the antenna performance and the talktime of your phone.



Switching off

 Press and hold the  key for a second.




Tip: Alternatively, press  quickly in standby mode, scroll with  or  to *Switch off*, and press  (OK).

3. Basic functions


■ Making a call

 1. In standby mode, key in the phone number including the area code using the keys to . The text Menu changes to Call.



If you make a mistake, press to delete the character to the left.

 2. Press (Call) and wait for the answer. The text Call changes to End.
3. Press (End) to finish the call (or to cancel the call attempt).



Switching to handsfree mode

When you are using the phone with the PPH-1 handsfree car kit, you can switch from handsfree mode to privacy mode by disconnecting the PPH-1 from the phone.

To switch back to handsfree mode, plug the PPH-1 into the phone.

International calls

1. In standby mode, press twice quickly for the + character which replaces the international access code.

2. Enter the country code, area code (remove the leading 0 if necessary) and phone number.
3. Press **Call** to call the number.

Adjusting the earpiece volume

You can adjust the earpiece volume during a call. Press **Volume Up** to increase and **Volume Down** to decrease the volume level.

If you want to adjust the earpiece volume while the phone is alerting you to an incoming call, press **Volume Up** twice and then adjust the volume.



Muting the microphone

 
To turn off the phone's microphone during a call: press **Mute** and then **Options**, scroll to *Mute*, press **Select**.

To turn on the microphone: press **Mute** and then **Options**, scroll to *Unmute*, press **Select**.

Redialling a last dialled number

You can redial any of the last 20 phone numbers that you have called or attempted to call. See also Dialed numbers (Menu 4-3) on page 71.

To redial one of these last dialled numbers:



1. In standby mode, press once to view the list of dialled numbers.
2. Use or to scroll to the desired phone number or name.
3. Press (Call) to call the number.

Making a call using the Phone book

If you have stored a phone number in the Phone book, you can dial it using the related name.

See page 51 for storing a phone number with a name.

1. Press (Menu) in standby mode.
2. Press (Select) (when *Phone book* is displayed).
3. Press (Select) (when *Search* is selected).
4. Key in the first letter of the name (using the keys to and press (OK). For example, to view the first name starting with the letter "S", press quickly four times.

You can skip this step if you like.

5. Scroll with or to the desired name. You can check the related phone number by pressing and holding .
6. Press (Call).



Quick find: Press in standby mode. The first name (and/or phone number) in the Phone book is displayed. Find the desired name by first keying in its first letter and pressing or .

Speed dialling a phone number

If you have assigned a phone number to one of the speed dialling keys to , you can call this phone number in one of the following ways (in standby mode):

- Press the corresponding speed dialling key and then (Call).
- If the *Speed dialling* function is on: Press and hold the speed dialling key until the call is started.

Note that pressing and holding calls your voice mailbox.




 


See also Assigning a phone number to a speed dial key (Menu 1-9) on page 53) and Speed dialling on page 80.

Making a new call during a call

You can have two calls in progress at the same time (network service).

1. During a call, press to change the text above from End to Options.
2. Press (Options), scroll to *New call*, press (Select), key in the phone number or recall it from the Phone book, and press (Call).

The existing call is put on hold. The active call is indicated by and the held call by .



3. To switch between the two calls: Press  (Options), scroll to *Swap*, press  (Select).
4. To end the active call: Press  (Options), scroll to *End active call*, press  (Select). The held call becomes active.
To end both calls: Press  (Options), scroll to *End all calls*, press  (Select).

■ Answering a call

 
When somebody is calling you, the phone rings (if the *Incoming call alert* setting is not set to *Off*) and flashes its lights, and a related text is displayed.

If the network could not identify the caller, *Call* is displayed.

If the caller could be identified, the caller's phone number (or name if stored in the Phone book) and *calling* are displayed.

1. To answer the call, press  (Answer).
If the call was diverted from some other phone number, the > sign may be shown after *Call* or *calling* (network service).
2. Press  (End) to finish the call.

Diverting or rejecting a call



If you do not want to answer the call, press . The caller will hear a "line busy" tone. If the *Divert when busy* function is activated (see page 88), the call is diverted e.g. to your voice mailbox.


Answering a new call during a call

When the *Call waiting options* function is on (see page 81), the phone plays a beep and displays a related text when you receive a call.


Do as you would when making a call during a call but this time select the *Answer* option. In a call list, a waiting call is indicated by ■■■. If you don't want to answer the call, select the *Reject* option.


 
■ Listening to voice messages

1. In standby mode, press and hold  for a second to call your voice mailbox. You can obtain the voice mailbox number from your service provider.
2. If the phone asks for the number of the voice mailbox, key it in and press  (OK). See also Voice mailbox number (Menu 2-9) on page 67 and Call divert (Menu 7) on page 88.

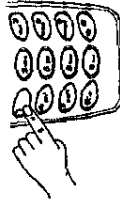


3. Listen to the message(s) that you have received.

4. End the call by pressing  (End).

 **Tip:** If the *Text Listen* is shown above the  key, you can call your voice mailbox by pressing this key.

■ Locking the keypad

The keypad lock prevents keys from being accidentally pressed when, for example, the phone is in your pocket or handbag.

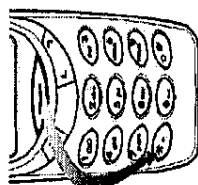

To turn the lock on:

In standby mode, press **Ⓜ** (Menu) and then ***** quickly.

To turn the lock off:

Press **Ⓜ** (Unlock) and then ***** quickly.

When the keypad is locked:

- The indicator **🔒** is shown
- You can answer, end or reject a call in the normal way. During a call, you can operate the phone as usual.
- The headset HDC-5 can be used as usual.



Note: When Keypadlock is on, calls may be possible to the emergency number programmed into your phone (e.g. 112 or other official emergency number). Key in the emergency number and press **Ⓜ** (Call). The number is displayed only after you have keyed in its last digit.

■ Selecting a ringing tone (Menu 5-1)

1. In standby mode, press **Ⓜ** (Menu).
2. Scroll with **⬅** or **➡** to *Tones* and press **Ⓜ** (Select).
3. Scroll to *Ringing tone* and press **Ⓜ** (Select).